


SHEET METAL

1958 Floor Layout

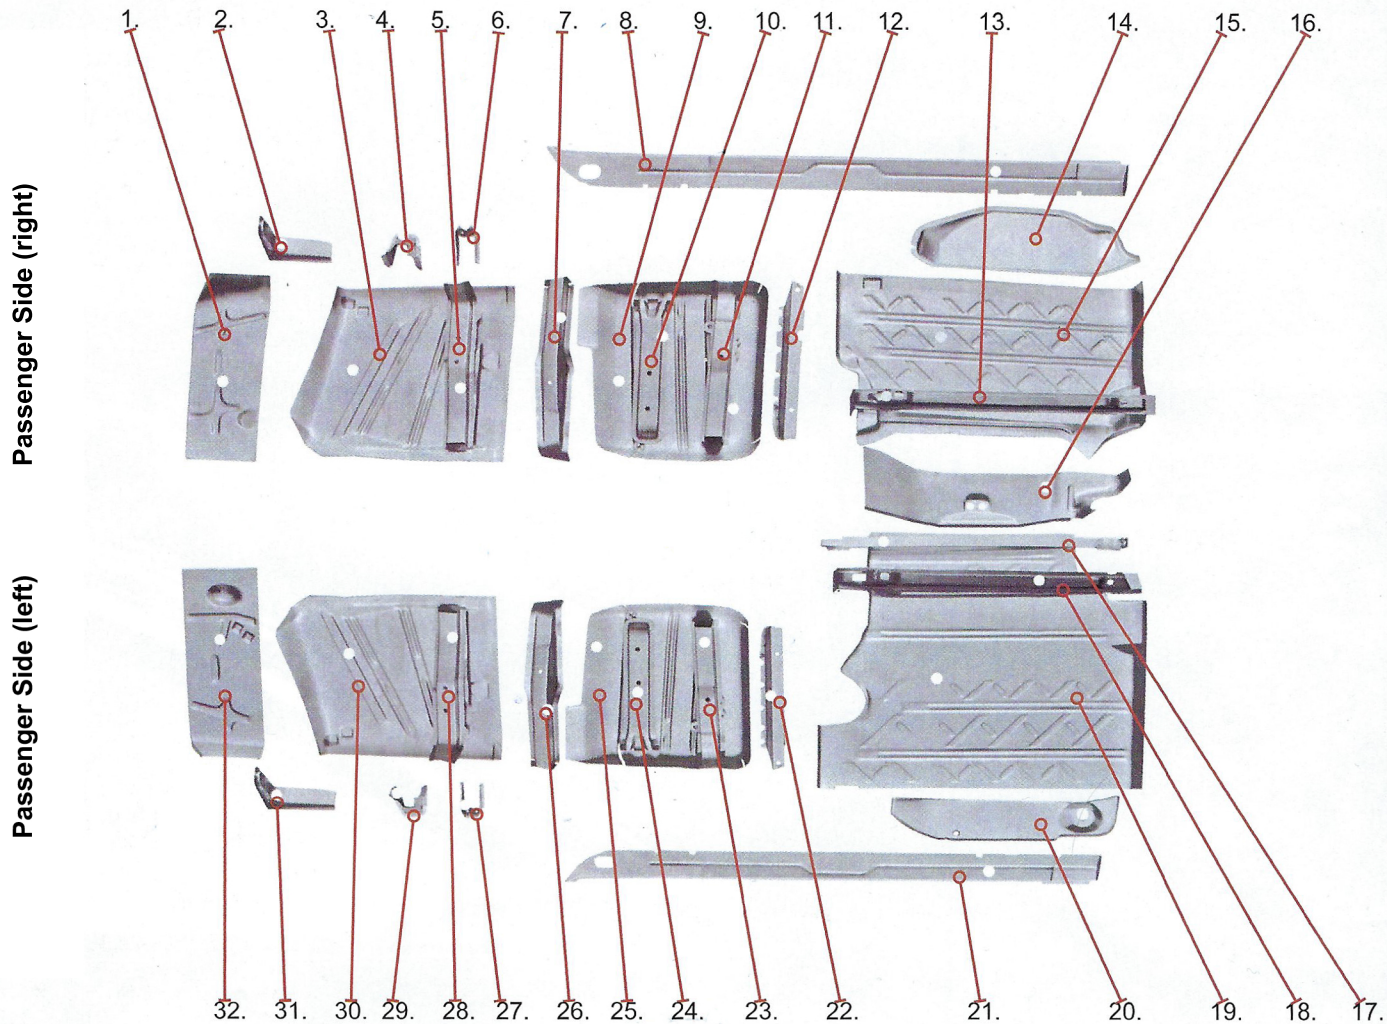

1	9005	RH Toe Board	17	ST225	Gas Tank Straps
2	9016R	RH Inside Cowl Brace (conv only)	18	1500L	LH Trunk Floor Brace
3	7751	RH Front Floor Pan	19	7768	LH Trunk Floor
4	9017R	RH Outside Cowl Support (conv only)	20	7770	LH Trunk Filler Panel
5	9007	RH 1st Floor Brace (22")	21	9081L	LH Inner Rocker
6	9018	Body Mount Support (conv only)	22	1291HL/CL	LH Under Seat Riser
7	9009	RH 2nd Floor Brace (25")	23	9012	LH 4th Floor Brace (22")
8	9081R	RH Inner Rocker	24	9010	LH 3rd Floor Brace (20")
9	7753	RH Rear Floor Pan	25	7752	LH Rear Floor Pan
10	9011	RH 3rd Floor Brace (20")	26	9008	LH 2nd Floor Brace (25")
11	9013	RH 4th Floor Brace (22")	27	9018	Body Mount Support (conv only)
12	1291HR/CR	RH Under Seat Riser	28	9006	LH 1st Floor Brace (22")
13	1500R	RH Trunk Floor Brace	29	9017L	LH Outside Cowl Support (conv only)
14	7771	RH Trunk Filler Panel	30	7750	LH Front Floor Pan
15	7769	RH Trunk Floor	31	9016L	LH Inside Cowl Support (conv only))
16	7759	Spare Tire Well	32	9004	LH Toe Board