


1958 DELRAY 2DR SEDAN SIDE MOLDING CLIP PACKAGE

These are the 6 packages which contain nuts, bolts, and screws which are used to attach the exterior side molding to your 1958. Each bag is numbered and will match the corresponding description listed below.

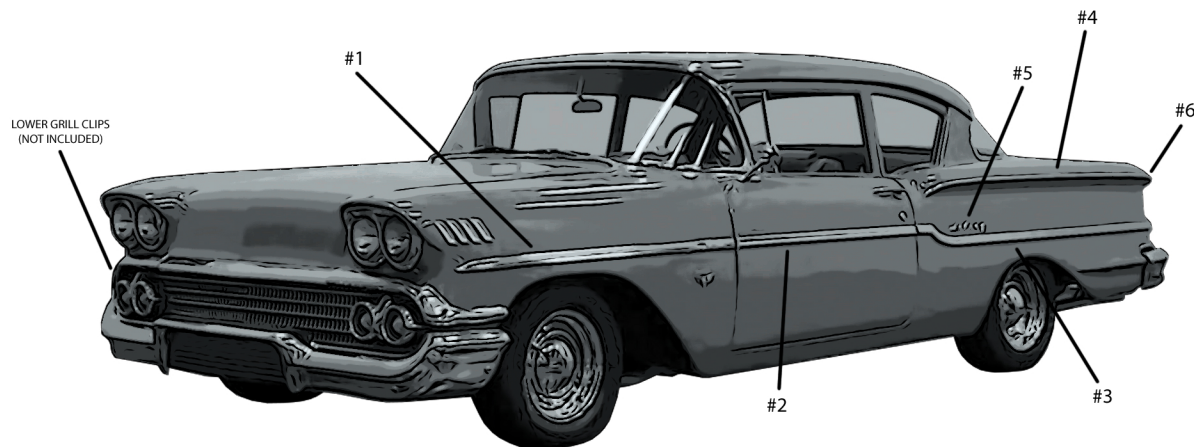

#1 The Fender

14 - Medium Adjustable T-Bolts (58-1496)
14 - Nuts

#2 The Door Moldings

10 - Wide Bathtub Clips (58-1489)
(Med T-bolts and nuts may be substituted for bathtub clips)
4 - Medium Adjustable T-Bolts (58-1496)
4 - Nuts
4 - Door End Clips with Screws (58-1486)

#3 The Lower Quarter Side Moldings

14 - Wide Bath Tub Clips (58-1489)
6 - Medium Adjustable T-Bolts (58-1496)
6 - Nuts

#4 Upper Quarter Bead Molding

30 - Small T-Bolts (58-1497) (replaces bath tub clips)
30 - Nuts

#5 The Quarter Script

10 - Barrel Clips (square slip clips)

#6 The "S" Molding

(The molding that goes around the taillights)
14 - Small T-Bolts (58-1497)
14 - Nuts

DO NOT OVER TIGHTEN THE BATHTUB CLIPS.
THEY WILL MARK YOUR PANELS
THEY NEED TO HAVE SOME MOVEMENT TO ASSIST INSTALLING THE MOLDINGS.

ALSO AVAILABLE

Bath Tub Clip Tool (part# 58-1480) \$24.95
Lower Grill Retainer Clips set (part# 58-1711) \$7