



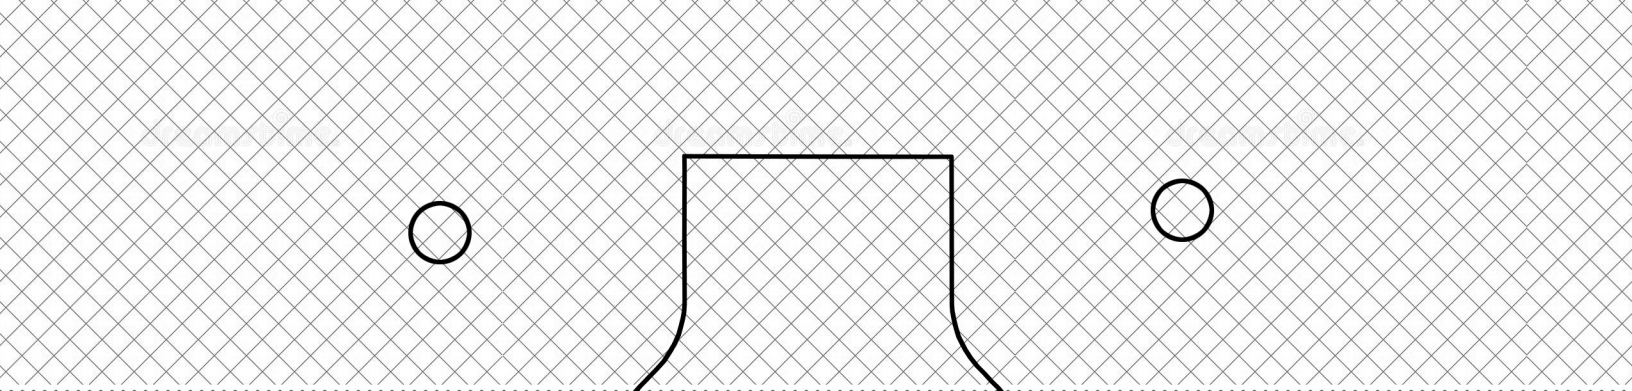

Cut along line and splice template 1 and 2 together

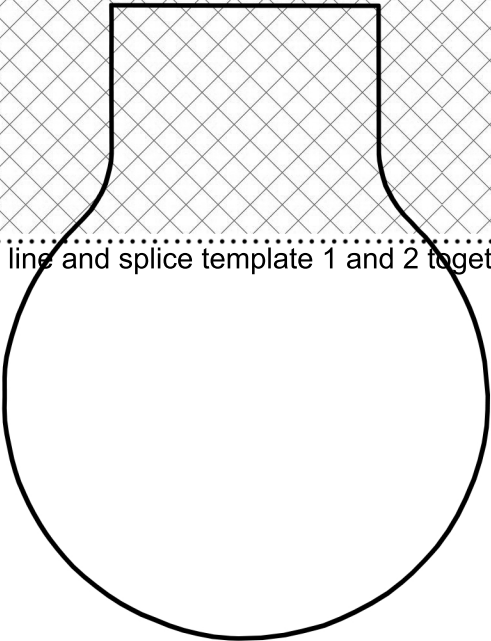

Drill 3/8" holes
here for the
new power regulator

